


Governor HYGOV and HYGOVD

Governor HYGOV and HYGOVD Hydro Turbine-Governor Model

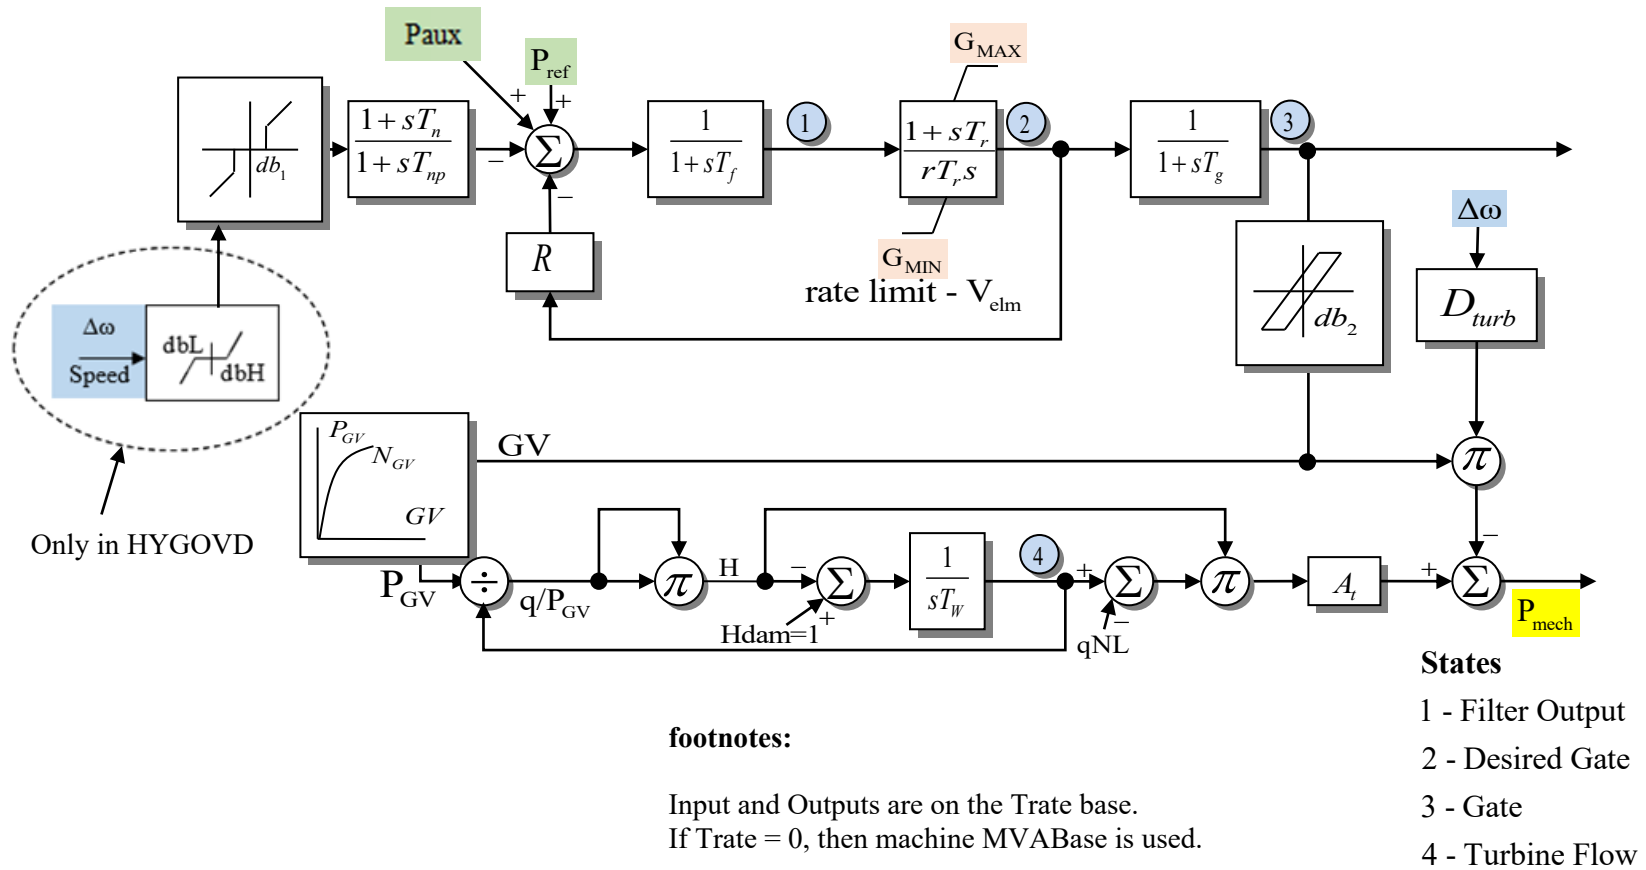

Model supported by PSSE and PSLF

Rperm shown as R, Rtemp shown as r

GV0, PGV0...GV5, PGV5 are the x,y coordinates of N_{GV} block

Ttur, Tn, Tnp, db1, Eps, db2, Bgv0...Bgv5, Bmax, Tblade not implemented in Simulator